

In order to ensure your child's safety, please be sure to read this manual before using this product, and use it correctly.

- Please keep this manual in a safe place.
- When attaching the extra parts, please be sure to carefully read the manual before doing so.
- When giving this away as a gift, please be sure to include this manual.

Contents

Before using	1
In order to use safely	1
Names of the parts	4
How to exchange batteries	5
How to use the nail care set	6
How to take care of children's nails	7
How to use on adult's nails	8
Replacing the attachment parts	10
Daily maintenance	10
Warranty certificate	on the back cover

Before Using

This product is for nail care. Please be sure not to use it for other purposes.

In order to use safely:

All the warning and safety tips are listed based on the level of danger and damage if handled incorrectly. Please be sure to read through them.

- Warning** When used incorrectly, it could lead to serious injury, even death.
- Attention** When used incorrectly, it may lead to injury or the product getting damaged.

1

Warning

- Please be sure to keep the product, casing, and the attachment parts in a safe place where children will have no access. Children mishandling the product or accidentally swallowing the parts could lead to a serious accident. If a child accidentally swallows anything, contact your doctor immediately.
- This product is not a toy. Keep out of reach of children. It may lead to a serious accident.
- The cover packing is to protect the product. Keep out of reach of children.

If the batteries are misused, it could cause leaking, generating heat, or even rupturing which could lead to serious injuries and accidents. Please be sure to follow the steps below:

- Be sure to read the instructions on the battery.
- Be sure to place the batteries correctly into the product.
- Do not charge, add pressure, add heat, or take the battery apart. Keep it away from fire.
- Do not use batteries with scratches/dents.
- Do not use batteries that has expired.
- Always be sure to turn the power off after using.
- Be sure to remove the battery once it has run out of power.
- Do not mix and match with a different brand of batteries when replacing it with a new one.
- When exchanging batteries, replace all of them at the same time.
- Be sure to use alkali batteries. Do not use manganese, nickel (Oxyride) or rechargeable batteries.
- Do not use batteries with labels coming off, or ones with dents/scratches.
- Do not replace the batteries while the product power is turned on.
- Once you are ready to discard the batteries, do so by following your local garbage disposal rules.
- If the liquid leaking from the battery gets on your skin etc, wash it off immediately with clean water and see your doctor.
- Keep batteries in a cool, dry place.
- Keep out of reach from children. If swallowed, contact doctors immediately.

2

- Replacing the batteries should be done by adults when children are not present.


Attention

- Use the product ONLY for nail care for humans. Using it on pets/animals or for other purposes may lead to injury or the product getting damaged.
- Do not take the product apart or try altering it/repairing it on your own. It may lead to unexpected accidents and injuries.
- Do not try stopping the spinning motor section with your hands. The motor section heating up can lead to possible damage. If you feel the product heating up, turn it off immediately, remove the battery and contact the customer center.
- If you see any smoke, odor, or strange sound coming from the product, please contact the customer center.
- Please stop using the product once the case/parts get damaged.
- Please do not drop the product on hard surface.
- Keep the product away from water. This product is not waterproof.
- Please be sure to keep the product inside the case when not in use.
- Be sure to handle/use this product with dry hands.
- If the case gets wet, be sure to wipe it with a dry cloth before using.
- Please keep the product in a dry cool place. Do not leave it inside a car during the summer, avoid damp/humid areas. It can cause damage to the product.
- Keep it in a clean area, avoid dust.
- Be sure not to injure your fingers when opening/closing the case.
- If the child expresses pain or any discomfort while using the product, stop immediately. It may cause injury to the child's finger/nails.
- Do not use the attachment parts that are for adults on children. It may cause injury to the child's finger/nails.
- Be sure not to press the attachment parts against your skin or nails. It may cause harm to your skin and nails.
- Some people have sensitive skin or weaker nails. If you notice any problems with the skin area around your nails, please do not use the product. It will either damage the area or make the condition worse.

3

- When attaching the parts to the product, make sure the power is turned off.
- Do not touch the spinning section. It may cause injury.
- Do not point the light to others. It may cause damage/pain to the eyes.
- You cannot carry the product around inside the case with the parts attached to it. The product will not be secure inside the case and could lead to damage.
- Do not leave the product unattended with the power turned on. It can lead to an accident, or eat up the power quickly.
- Do not place any other objects inside the case.

Names of Parts

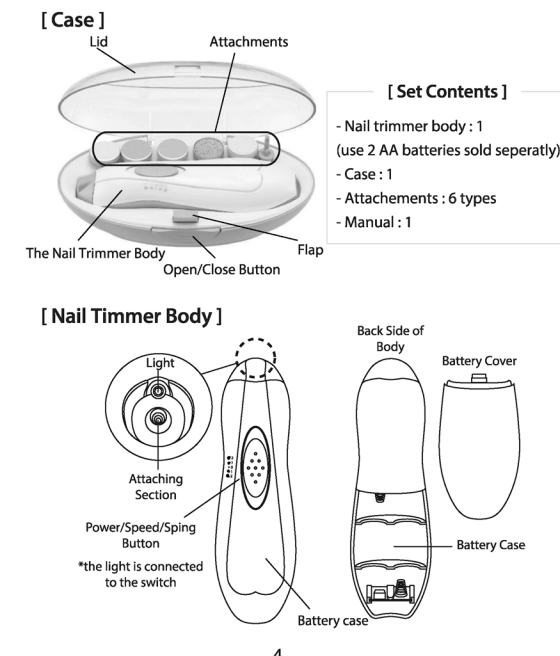

4

KI SEUK SHANG HAI International Trading Co., Ltd.

Product Name : BABY DEDICATED MANICURE SET
Model No : 1H1B-003-01
Size : 132x34.8x62mm(LxWxH)
Standard : GB 4706.1-2005
Manufacturer : KI SEUK SHANG HAI International Trading Co., Ltd.
Address : Room B 519, 2 Bldg, no.2588 hongmeisouthroad minhan District Shanghai

Tel : +86-138-1765 5726
Place of origin : China

- LOT** BATCH CODE SEE THE LOT NUMBER ON THE LABEL ON THE CASE COVER
- CONSULT INSTRUCTIONS FOR USE**
- 100% RECYCLABLE**
- WASTE FROM ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)**

Main Materials

Nail trimmer body	ABS resin
Case	Case: ABS resin, the lid: polystyrene
The case's slip proof section	EVA resin
Attachment base	ABS resin
Shaving disc	Stainless steel
Polishing disc	Wool
Point polisher	Steel
Sand paper	Polisher/paper/EVA resin

How to Exchange Batteries

« Once the batteries are low on power, you will notice the spinning speed becoming slow, and the light becoming dimmer which would be the right timing to exchange batteries.

« Be sure to turn the power off when doing so.

1. The battery case is on the back side of the nail trimmer body. Hold the body securely, and while firmly holding down onto the lid, slide it in the direction of the arrow.

2. As shown in the image, place the batteries (two AA batteries) correctly.

3. Set the lid back to its original place along with the flap, and slide it in the direction of the arrow until you hear a click sound.


5

How to Use the Nail Care Set

[About the attachment]

- The product can be used to shape children's nails shape.
- The ages shown below are basic guidelines. Please be sure to carefully choose the attachment based on the child's age, nail condition/thickness.
- It is possible for adults to use these on themselves.

<For Kids>

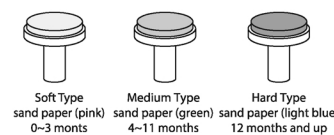

fine ← → rough

<For Adults>





Attention

- Please do not use the adult attachments on children. It can cause damage on the children's fingers and nails. It is extremely dangerous.
- The sand paper is to only shape the nails. Please do not use it to polish the nail surface. The sand paper can damage a child's thin/soft nails.

6


How to Take Care of Children's Nails

1. Choose the sand paper based on your child's age. (Please look at page 6)
2. Insert the attachment base into the slot. Please be sure to insert all the way.
3. Place the child's hand on your knee, and be sure that the hand is on a secure place.
4. Turn on the switch slightly away from the child first. Once you turn it on, it will start spinning immediately. You can adjust the speed and also change the direction at the same time. For children, be sure to set at a lower speed. Whether you choose right spin or left spin will be up to you.

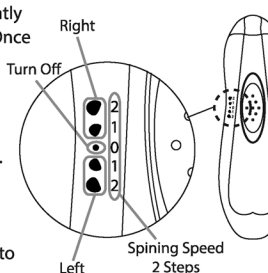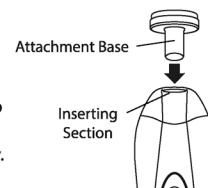

You will see the light turn on.
* The light is connected to the speed setting switch. You cannot control the brightness of the light or only turn on the light itself.

5. Once you secure the hand, lightly let the sand paper touch the tip of the nail. Keep it a 50~60 degree angle, and shape the outside section of the nail. Do it little by little, checking the results as you go. If you switch from left to right too often or press too hard, it may cause some difficulties.

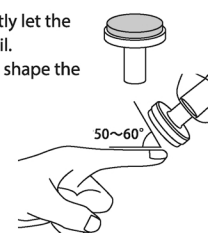

7

Attention

- When changing the angle, the light might not reach certain area.
- Please do not use it on the surface of a child's nail.
- Do not apply it to one section for a long time. It might polish/scrape the nail and lead to pain.
- If the child is feeling uncomfortable and cannot hold still, please stop using the product immediately.

*When using this product after you have trimmed/cut your nails, please do not apply to the area which has already been trimmed. Just use it to round off the sharp edges.

6. Once you are done with one nail, turn the power off. Safely secure the hand again, turn the power on, and move onto the next nail.
7. When you are done with all the nails, turn the power off. Clean off the dust around the nails.
8. Remove the attachment from the body, and place it into the case where it belongs.

How to Use on Adult Nails

1. Choose an attachment (for adults) based on your purpose. (as shown on page 6)
 2. Insert the attachment base into the slot. Be sure to insert it all the way in.
 3. Be sure there are no children present before turning on the switch. The disc will start spinning immediately.
- *You can set the speed and the direction of the spin at the same time. For adults, any speed could be chosen. You can chose either the right or left spin based on your preference.

Attention

- Please do not use the product on one area for too long. The product may file off the surface of the nail which can cause pain, or you may feel heat from friction.

8

[Shaving disc (for shaping the nails)]

Apply the disc lightly to the area you would like to shape. Place the disc at a 50~60 degree angle. Adjust the angle as you go. Pressing too hard or switching between right and left too often can lead to difficulties.

* The product cannot be used to remove gel nails.

[Point polisher]

Use this product when shaping your nail tip and cuticles. When shaping the nails, apply it to your outer nail and shape it slowly as you go. Pressing too hard or switching between right and left too often can result in difficulties.

* For cuticles, apply it in the area you would like to work on.

[Polishing disc (for finishing smooth touch)]

Apply the whole surface of the disc to your nail. Move slowly as you go and polish. Avoid pressing too hard or moving it around. The product will not have its full effect if the surface of the nail is not smooth. Be sure to smooth out the surface of your nail beforehand.

The 3 steps when polishing the surface

- STEP 1. Medium type sand paper (green): It will remove the bumps from adult nails.
 - STEP 2. Soft type sand paper (pink): It will smooth out the base of adult nails.
 - STEP 3. Polishing disc: This will remove any dirt and smooth out the surface.
- Please adjust the order of the disc/sand paper based on the condition of your nails.

4. Once the process is done, turn the power off. Be sure to clear off the dust on your fingers.
5. Remove the attachments from the body. Place them back into the case where each part belongs.

9

Replacing the Attachment Parts

All attachment parts are expendables. The surface of the polisher will eventually wear off and will cause problems with the process, so please be sure to get a replacement. When interested in purchasing a replacement, please contact our customer center.


Once you have replaced the parts, be sure to discard the old one in order to prevent unexpected accidents and injuries.

Daily Maintenance

- After using it for a certain period of time, be sure to turn the power off and let it cool down first before cleaning it.
- When cleaning the product, wipe it with a dry clean cloth. Do not wash it with water, detergent, hot water, alcohol or any other liquid. It will cause damage.
- Never use paint thinner, benzene or other cleaners.
- If the attachment slot has dust inside, it will effect the speed of the spin. Please clean/wipe that area with a dry cloth or cotton swabs.
- Once the cleaning is done, be sure to put it back inside the case. Keep in a cool dry area, avoid dust, humidity, and fire.
- Keep out from reach of children.

[The placement for the attachment parts]

When placing the attachments back into the case, there is a specific spot for the point polisher. If the point polisher is placed in the wrong spot, the case lid will not close.

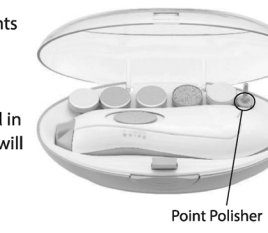

Point Polisher

10